

The VCR is located on the desk by the window. Please follow these steps to use VCR.

1. Find the remote labeled “TV”. Press the red button under TV to turn on both Pioneer monitors on the wall.
2. Press the DVD icon under the Tandberg Video Sources on Tandberg remote.



Or Choose Presentation from Menu, then select VCR under Presentation.



